



DATE 07 FEB 2012



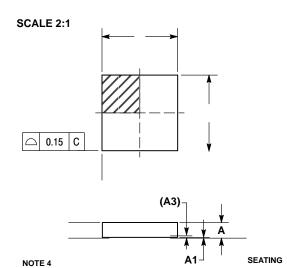

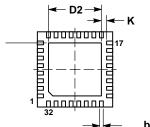

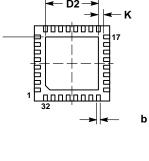



XXXXX = Specific Device Code Α = Assembly Location

WL = Wafer Lot ΥY = Year WW = Work Week G = Pb-Free Package

