
1 DATE 04 MAY 2016 SCALE 4:1

## **SOLDERING FOOTPRINT\***

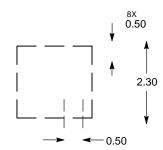

DIMENSIONS: MILLIMETERS

<sup>\*</sup>For additional information on our Pb ïFree strategy and soldering details, please download the **onsemi** Soldering and Mounting Techniques Reference Manual, SOLDERRM/D.